



## 1.7 Litre Cordless Jug Kettle

### Model No: IG7104/IG7204

**Important:** This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

### IMPORTANT SAFETY INSTRUCTIONS

- This appliance is designed for domestic use only and NOT for commercial applications. No responsibility is accepted for damage resulting from improper use or non-compliance with the instructions.
- Please keep these instructions for future reference. If the appliance is passed to another person this instruction manual should accompany it.
- Before inserting the main plug into the socket, check that the main supply voltage and current rating corresponds with the power supply details shown on the appliance model label.
- Never allow the heating base or the kettle to make contact with or be immersed in water. However, should this happen, have the unit examined by a qualified person. If repairs are needed, including the replacement of the power cord please send the appliance to our customer service department.
- Do not operate the appliance if it or the power cord shows any signs of damage, or the appliance has been dropped.
- Always remove the plug from the wall socket after use or in case of any malfunction or before cleaning.
- When removing the plug from the wall socket, never pull on the power cord.
- Children do not recognize the dangers that

may occur when operating electrical appliances, therefore keep children away from such appliances.

- Do not attempt to remove any parts of the housing nor insert any metal objects into the interior of the appliance.
- To prevent damage to the power cord, do not let it pass over sharp edges.
- Do not expose the appliance to rain or moisture and do not operate the appliance outdoors or with wet hands.
- Use only clean, cold water.
- The appliance operates at very high temperatures.

### CAUTION:

**THERE IS DANGER OF SCALDING FROM ESCAPING WATER OR STEAM.**

- Do not touch any part of the kettle except the handle (when the appliance is in use) and ensure that the lid is properly secure.
- This appliance is designed for heating water only. Never put any other liquid into the kettle.

### OPERATION GUIDELINES

#### Before using for the first time

- Prior to initial use, clean the kettle by going through several boiling cycles, using clean water with each cycle and filling the kettle to its upper marking. When the water reaches boiling point, the kettle switches off automatically.
- Place the heating base (5) on a firm and level surface.
- Pour the desired amount of clean water into the kettle (3). Do not touch any part of the kettle except the handle (7). When the appliance is in use, ensure that the lid (1) is properly closed.
- The amount of water can be measured by the level mark (4) on the outside of the kettle. Always pay attention to the minimum and maximum levels and ensure that the lid (1) is properly and firmly closed.
- Position the kettle in such a way on the base (5) that the underside of the kettle fits precisely into the contact on the base.
- Insert the plug into a wall socket.
- Put the on/off switch (8) to its 'ON' position to start the heating process. The indicator light in the water level window will turn on.
- As soon as the water reaches boiling point, the on/off switch (8) returns automatically to the OFF position and the indicator lamp will go out. The kettle can also be switched off manually by putting the on/off switch to the OFF position.
- The hot water may now be poured safely through the spout.
- This kettle is equipped with a safety cut-out to protect the appliance from damage in case of inappropriate use.
- Should the appliance be accidentally operated without water or if all the water has evaporated the safety cut out will automatically switch off the heating element.

### CORDLESS JUG KETTLE – AT A GLANCE



1. Lid
2. Filter (in spout)
3. Water Container
4. Illuminating Water Level Gauge
5. Cordless Base
6. Lid Opening Button
7. Handle
8. ON/OFF Switch

- In such a case remove the plug from the wall socket immediately and refill the kettle only after an adequate cooling down period, about 15 to 20 seconds.

### DECALCIFYING

- Should the appliance switch off before reaching boiling point this is a sign that decalcifying is necessary.
- Any regular descaling agent may be used, provided the relevant instructions are observed.
- Do not fill the kettle to the upper mark to avoid spillage if the descaling agent causes the water to foam.
- To clean the kettle thoroughly of any decalcification residues let it go through several boiling cycles using clean water with each cycle. Rinse the kettle with clean water afterwards.

### CLEANING AND CARE

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- Do not use abrasives or harsh cleaning solutions.
- Do not immerse the base or the kettle in any liquid. To clean the exterior, use a slightly damp, lint-free cloth.
- It is advisable to remove limescale deposits from the kettle at regular intervals.

### WARNING:

- Do not immerse kettle in any liquid.
- If the kettle is overfilled boiling water may be ejected.
- The kettle should only be used with the power base provided.
- If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

### SPECIFICATION:

**Model No: IG7104  
& IG7204**

**Supply voltage:  
240V~50Hz**

**Power consumption:  
3000W**

**Capacity: 1.7 Litres**

# IGENIX

## 1.7 Litre Cordless Jug Kettle

**Model Number: IG7104/IG7204**

## INSTRUCTIONS FOR USE



**Thank you for purchasing this product.  
Please read these instructions carefully before using**

# IGENIX

Distributed by Igenix, Ipswich IP3 9RR. Tel: 01473 271272  
www.igenix.co.uk